


PEDESTALS
(Removal & Fitting of Stationery Drawers)

DRAWER REMOVAL: Make sure the drawer is unloaded:

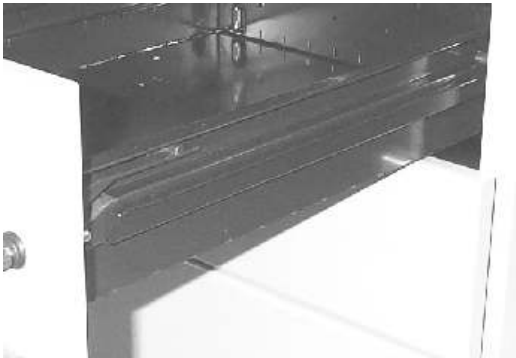

Pedestal stationery drawer fitted with a Fullerer suspension slide.



Unload the drawer and extend fully. Hold the drawer underneath the front and raise, as you pull the drawer away from the cabinet.




The motion requires the slide wheel attached to the drawer, to rise over the slide wheel attached to the cabinet.



Pull the drawer away from the cabinet. (Take care to support the weight of the drawer)

DRAWER FITTING: Make sure the drawer is empty:

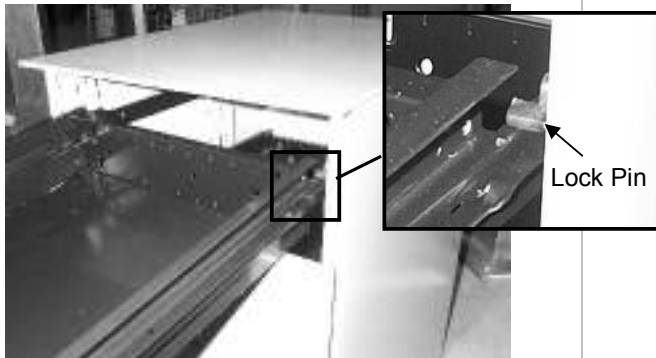

When fitting the drawer make sure the right hand rear side of the drawer locates underneath the locking bar pin, and then tilt the front of the drawer downwards. The same motion as with removal (Slide wheel rising over slide wheel) is required.



Push the drawer home, and test the drawer is functioning correctly. (Make sure lock pin has dropped, and sits on top of the side ledge of the drawer, otherwise the drawer may not close, or function correctly)